




2000.35.021

Energy Meter

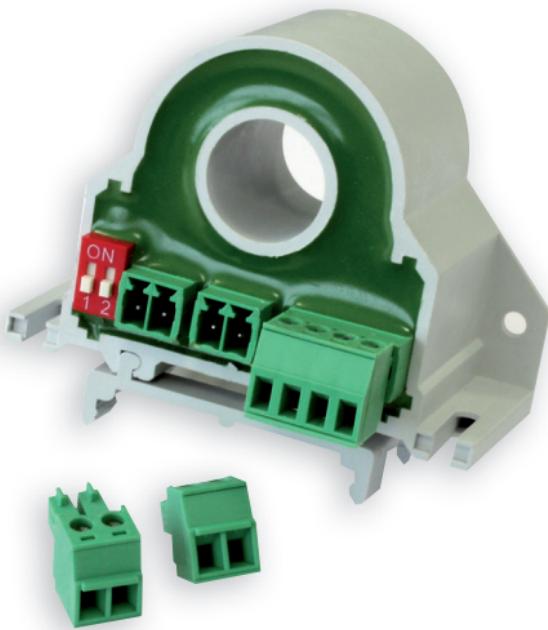

User manual / Manuale d'uso

Index

1	<i>Safety guide lines</i>	4
2	<i>Model identification</i>	4
3	<i>Technical data</i>	4
3.1	<i>Main features</i>	4
3.2	<i>Hardware and software features</i>	4
4	<i>Dimensions and Installation</i>	6
5	<i>Electrical wirings</i>	6
6	<i>Mounting</i>	7
7	<i>Configuration</i>	7
7.1	<i>Remarks</i>	7
8	<i>EnergyMeter-Programmer</i>	8
9	<i>Modbus Register Map</i>	8

Sommario

10	<i>Norme di sicurezza</i>	10
11	<i>Identificazione del modello</i>	10
12	<i>Dati tecnici</i>	10
12.1	<i>Caratteristiche principali</i>	10
12.2	<i>Caratteristiche Hardware e Software</i>	10
13	<i>Dimensioni ed installazione</i>	12
14	<i>Collegamenti elettrici</i>	12
15	<i>Montaggio</i>	13
16	<i>Programmazione e configurazione</i>	13
16.1	<i>Osservazioni</i>	13
17	<i>EnergyMeter-Programmer</i>	14
18	<i>Modbus Register Map / Mappa dei Registri Modbus</i>	15

Introduction

Thank you for choosing a Pixsys Energy Meter.

The 2000.35.021 is a **Single-phase Power Meter** able to measure the TRMS AC/DC Current and Voltage. On the RS485 Modbus following measuring units are available: Irms, Vrms, Watt, Var, Va, Vpk, Ipk, Frequency, Cosφ, Energy bidirectional and THD. The device is fully configurable by RS485, DIN rail mounting, 4kV galvanic isolation for Voltage input.

1 Safety guide lines

Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device. Disconnect power supply before proceeding to hardware settings or electrical wirings. Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual. Do not dispose electric tools together with household waste material. In observance European Directive 2002/96/EC on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

2 Model identification

Power supply 9..30 V DC

2000.35.021	Power / Energy Meter Single Phase AC/DC TRMS - RS485 Modbus
-------------	--

3 Technical data

3.1 Main features

- TRMS Measure, THD available
- 0,5 % Accuracy
- RS485 Modbus integrated
- Bidirectional Energy metering
- DIN rail mounting in both side
- OEM's design, low cost
- Fully configurable by free interface software EnergyMeter-Programmer
- Bootloader for updating firmware


3.2 Hardware and software features

Power supply	9..30 V DC, Protection against polarity reversal and overtemperature
Absorption	1,3 W
Protection index	IP20
Accuracy	Voltage, Current, Active Power, Reactive Power, Apparent

power: < 0,5% F.S.
 Frequency: +/- 0,1 Hz
 Energy: +/- 1% of reading
 Vpeak, I peak: +/- 5% f.s.

Measurement	Irms, Vrms, Watt, Var, Va, Vpk, Ipk, Frequency, Cosφ, Energy bidirectional, THD
Temperature coefficient	< 200 ppm/°C
Working temperature	-15..+65°C
Storage temperature	-40°C.. +85°C
Type of measure	TRMS or DC
Range	Current: Up to 50 A AC/DC Voltage: up to 800 V AC or 1000V DC RS485 customize setting with free interface software EnergyMeter-Programmer
Crest factor	1,8 (on current measurement)
Output	RS485 Modbus RTU
Working frequency	DC or 1.400 Hz
Sampling rate	11k Samples per Second
Input impedance	1 M ohm +/-1%
Isolation	3 kV on bare wire for Current measure, 4 kV for Voltage measure (reinforced insulation to power supply and serial output)
Hysteresis	0,15% f.s.
Humidity	10..90% not condensing
Altitude	Up to 2000 m s.l.m.
Weight	80 g.
Filling	Epoxy Resins
Box material	PBT, grey
Mounting	Screw predisposition for vertical/horizontal mounting, DIN rail clips (included) for vertical/horizontal mounting.
Terminals	Removable terminals 3,5mm, n°1 4 poles, n°2 2 poles
Dip-switch	2 poles
Led	N°1 yellow, Power on fixed, data communication blinking
Standards CE	EN61000-6-4/2006 + A1 2011; EN64000-6-2/2005; EN61010-1/2010
Overvoltage category	Cat III up to 600V; Cat II up to 1000V
Dimensions	46,1x 63x 26,4 mm (terminal excluded)


4 Dimensions and Installation

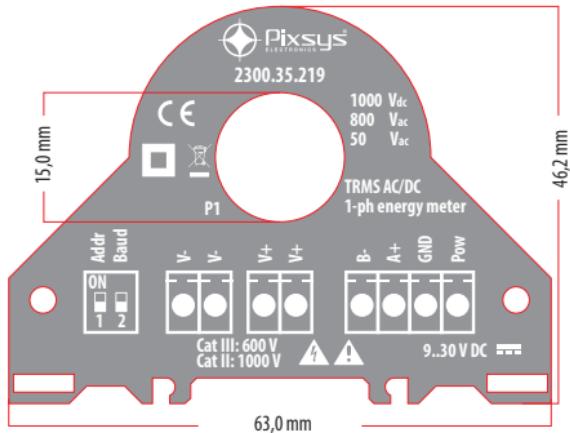

5 Electrical wirings

! Although this controller was designed to resist electromagnetic interferences in industrial environments, please observe following safety guidelines:

- Separate the control line from the power wires.
- Avoid proximity of remote control switches, electromagnetic contactors, powerful engines and in all instances use specific filters.
- Avoid proximity of power groups, especially those with phase control.

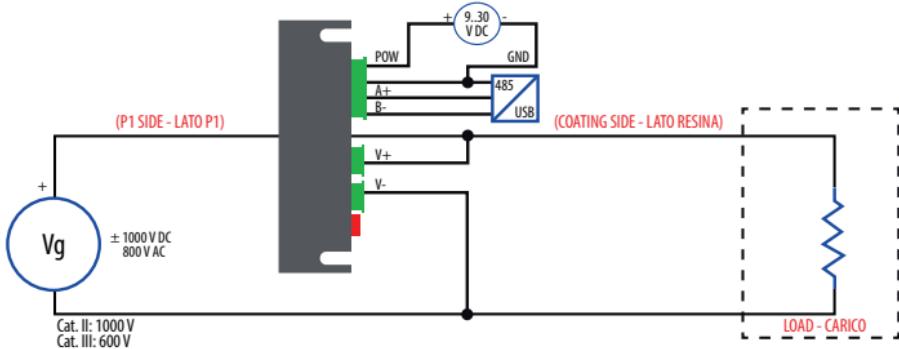

6 Mounting

The Power Meter 2000.35.021 can be mounted in any position (see photo below), horizontal or vertical mounting, horizontal or vertical through the two hooks for DIN rail included in the box.



7 Configuration

Using a serial link RS485-USB you can connect the 2000.35.021 with the interface program EnergyMeter-Programmer. This software allows to set the Modbus address, baudrate, delay, the TV and TA ratio, to modify a filter in order to have fastest response time instead of a more stable measurement (filter range from 1-speed to 5-accuracy). You can download the EnergyMeter-Programmer free of charge from Download Area on our website www.pixsys.net.

A second way to program the 2000.35.021 is by using the Modbus Register Map directly.

7.1 Remarks

- Modbus connections: A+ and B- as per Modbus RTU standards;
- Modbus Register reference: with reference to the logical address, for ex. 40010, corresponds to physical address n°9 as per Modbus RTU standard;
- Modbus functions supported: 3 (Read multiple registers, max 100), 6 (Write single), 16 (Write multiple).
- Any change made by dip-switch requires to switch off the power supply

Energy storage data on flash memory: 4,5 years minimum, 45 years typical

Minimum Current measurement offset: 100mA

Minimum Power measurement offset: 1 W

Measurement refresh: every 50 cycles or 1 second (the faster), programmable by EnergyMeter-Programmer

If you want to set the device by EnergyMeter-Programmer set the dips to 0. If you want to set by RS485 directly, set the first dip to 1 (up) then use the second dip for baudrate setting (0 for 9600 or 1 for 38400). After the settings, please save the configuration by the COMMAND register, then switch off the power supply: Before switching on the power supply set the dips to 0.

Dip-switch settings	1	2
All setting from EEPROM	0	0
Set Address 1- Baud 9600	1	0
Set Address 1 -Baud 38400	1	1

8 EnergyMeter-Programmer

The free interface program EnergyMeter-Programmer is the fastest way to configure the device. The changes made to the program act on the register of the 2000.35.021. To restore the default configuration, just press the button FACTORY DEFAULT.

Type of measure	Allows the selection of the measure RMS or DC only to define the sign (positive or negative) of reading
Save on energy flash	It is possible to activate the saving of the counters directly on the device's flash memory
Report of transformation	In case you would use the TA and / or TV, you can define the transformation ratio for the current input and voltage input, the default ratio is 1:1
Filter	Allows to insert a filter on reading in order to get more speed in responding (value 1) or a more stable and accurate measurement (value 5). By default the value is set to 2. You can choose between intermediate values already set or manually enter the desired filter by choosing the CUSTOM option from the menu. In this case, you can set the following parameters: filtering in DC, filtering in AC (default value 5), Frequency measurement on Current channel

CAUTION: Magnetic fields of high intensity can vary the values measured by the transformer. Avoid installation near permanent magnets, electromagnets or iron masses that induce strong changes in the magnetic field. If any irregularity, to reorient or move the transformer in the area most appropriate.

9 Modbus Register Map

See paragraph 9, page 15.

Notes / Updates

Introduzione

Grazie per aver scelto un Energy Meter Pixsys.

Il 2000.35.021 è un Energy / Power Meter monofase in grado di misurare la corrente e la tensione AC/DC TRMS.

L'isolamento per la tensione di ingresso è di 4kV. Tramite l'uscita RS485 Modbus sono disponibili: Irms, Vrms, Watt, Var, Va, Vpk, Ipk, Frequency, Cosφ, Energy bidirezionale, THD. Il dispositivo è configurabile tramite la porta RS485.

Predisposto per il montaggio su barra DIN.

1 Norme di sicurezza

Prima di utilizzare il dispositivo, leggere con attenzione le istruzioni e le misure di sicurezza contenute in questo manuale. Disconnettere l'alimentazione prima di qualsiasi intervento sulle connessioni elettriche o settaggi hardware.

L'utilizzo/manutenzione è riservato a personale qualificato ed è da intendersi esclusivamente nel rispetto dei dati tecnici e delle condizioni ambientali dichiarate.

Non gettare le apparecchiature elettriche tra i rifiuti domestici.

Secondo la Direttiva Europea 2002/96/CE, le apparecchiature elettriche esauste devono essere raccolte separatamente al fine di essere reimpiegate o riciclate in modo eco-compatibile.

2 Identificazione del modello

Modello con alimentazione 9..30 V DC

2000.35.021	Power / Energy Meter Monofase AC/DC TRMS - RS485 Modbus
-------------	--

3 Dati tecnici

3.1 Caratteristiche principali


- Misura di tipo TRMS, THD disponibile
- Classe di precisione 0,5 %
- Uscita RS485 Modbus RTU integrata
- Misure di energia bidirezionale
- Montaggio su barra DIN in verticale o orizzontale
- Ideale per costruttori di macchine, esecuzione low cost
- Facilmente configurabile via RS485 tramite software EnergyMeter-Programmer
- Bootloader per aggiornamento firmware

3.2 Caratteristiche Hardware e Software

Alimentazione	9..30 V DC, Protetto contro l'inversione di polarità e le sovratemperature
Assorbimento	1,3 W
Classe di protezione	IP20

Precisione	Tensione, Corrente, Potenza Attiva, Potenza Reattiva, Potenza Apparente: < 0,5% F.S. Frequenza: +/- 0,1 Hz. Energia: +/- 1% sulla lettura. Vpicco, Ipicco: +/- 5%
Misure	Irms, Vrms, Watt, Var, Va, Vpk, Ipk, Frequency, Cosφ, Energy bidirezionale, THD
Coefficienti di temperatura	< 200 ppm/°C
Temperatura di lavoro	-15..+65°C
Temperatura di stoccaggio	-40°C.. +85°C
Tipo di misura	TRMS o DC
Campo di misura	CORRENTI: FINO a 50 A AC/DC. TENSIONI: FINO a 800 V AC o 1000V DC. Configurabili tramite software EnergyMeter-Programmer
Uscita	Serial RS485 Modbus RTU
Frequenza di lavoro	DC o 1..400 Hz
Velocità di campionamento	11k campioni al secondo
Impedenza d'ingresso	1 Mohm +/- 1%
Isolamento	3 kV su cavo nudo per la misura di corrente, 4 kV per la misura di tensione (isolamento rinforzato rispetto ad alimentazione e uscita seriale)
Fattore di cresta	1,8 (sulla misura di corrente)
Umidità	10..90% non condensante
Altezza	Isolamento garantito fino a 2000m s.l.m.
Peso	80 g.
Riempimento	Resina epossidica bicomponente
Materiale involucro	PBT, grigio
Montaggio	Predisposto per il montaggio a parete in verticale/orizzontale tramite viti, predisposto per montaggio a barra DIN in orizzontale o verticale tramite clips (incluse)
Morsetti	Morsetti estraibili 3,5mm, n°1 4 poli, n°2 2 poli
Dip-switch	2 poli
Led	N°1 giallo, Strumento acceso led fisso, in comunicazione lampeggio
Omologazioni ce	EN61000-6-4/2006 + A1 2011; EN64000-6-2/2005; EN61010-1/2010
Categoria di sovratensione	Cat III fino a 600V; Cat II fino a 1000V
Dimensioni	46,1x 63x 26,4 mm (morsetti esclusi)


4 Dimensioni ed installazione

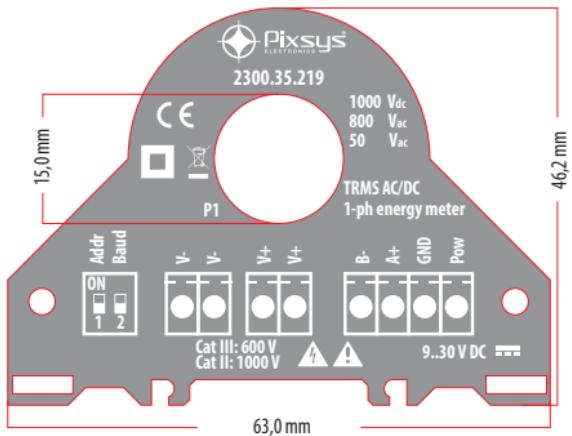

5 Collegamenti elettrici

Benché questo regolatore sia stato progettato per resistere ai più gravosi disturbi presenti in ambienti industriali è buona norma seguire la seguenti precauzioni:

- Distinguere la linea di alimentazioni da quelle di potenza.
- Evitare la vicinanza di gruppi di teleruttori, contattori elettromagnetici, motori di grossa potenza e comunque usare gli appositi filtri.
- Evitare la vicinanza di gruppi di potenza, in particolare se a controllo di fase.

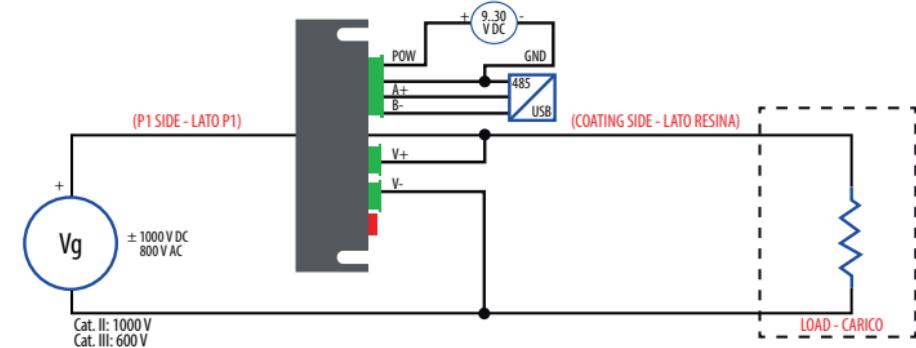

6 Montaggio

Il 2000.35.021 può essere montato in qualsiasi posizione (vedere foto): orizzontale o verticale con viti, orizzontale o verticale attraverso i due gancetti per barra DIN inclusi nella scatola.



7 Programmazione e configurazione

Attraverso un dispositivo seriale RS485-USB è possibile collegarsi al 2000.35.021 tramite il programma di interfaccia **EnergyMeter-Programmer**. L'utilizzo di questo software, scaricabile gratuitamente dall'area download del sito www.pixsy.net, permette di configurare il dispositivo via PC.

In alternativa, settando i dip in maniera opportuna (vedi tabella dei Dip-switch), si può mettere in comunicazione il 2000.35.021 direttamente con il Master via RS485 Modbus RTU. Tutte le configurazioni del dispositivo, in questo caso, saranno eseguite utilizzando la Mappa dei Registri modbus.

7.1 Osservazioni

- Connessioni Modbus: A+ e B- come previsto dagli standard Modbus;
- Riferimenti di Registro Modbus: all'indirizzo logico, per es. 40010, corrisponde l'indirizzo fisico n°9, come previsto dagli standard Modbus;
- Funzioni Modbus supportate: 3 (Read multiple register, max 100), 6 (Write single), 16 (Write multiple)
- Per rendere attive tutte le modifiche via dip-switch bisogna togliere l'alimentazione al dispositivo.

Conservazione dati energia su flash: minimo 4,5 anni, 45 anni tipico.

Minimo valore di Corrente misurata (cut off): 100mA

Minimo valore di Potenza misurata (cut off): 1 W

Velocità di campionamento: ogni 50 cicli o ogni 1 secondo (il più veloce dei due), programmabile da EnergyMeter-Programmer.

Per la configurazione del dispositivo tramite EnergyMeter-Programmer, impostare entrambi i dip a zero (basso). Per la configurazione via RS485, alzare il dip 1 e scegliere la velocità di comunicazione con il dip 2. Una volta configurato, potete riportare il modulo nella configurazione di default in modo tale che prenda le configurazioni memorizzate in EEPROM.

Dip-switch settings	1	2
Configurazione da EEPROM	0	0
Set Indirizzo 1- Baud 9600	1	0
Set Indirizzo 1 -Baud 38400	1	1

8 EnergyMeter-Programmer

il programma di interfaccia gratuito EnergyMeter-Programmer è lo strumento più veloce per la configurazione del dispositivo. Le modifiche effettuate sul programma agiscono sui registri del 2000.35.021, qualora vogliate ripristinare le configurazioni di default basta premere il pulsante DEFAULT DI FABBRICA.

Modalità di misura	permette la selezione della misura in RMS o DC solo per definire il segno, positivo o negativo, della lettura.
Salvataggio su flash	è possibile attivare o disattivare il salvataggio dei contatori direttamente sulla memoria Flash del dispositivo.
Rapporto di trasformazione	nel caso in cui si usassero dei TA e/o TV è possibile definire il rapporto di trasformazione per l'ingresso in corrente e per l'ingresso in tensione, di default il rapporto è 1:1.
Filtraggio	permette di introdurre un filtro sulla lettura in modo da ottenere maggiore velocità nella risposta (valore 1) oppure una misura più stabile e accurata (valore 5), di default il valore è impostato a 2. è possibile scegliere tra dei valori intermedi già impostati oppure introdurre manualmente il filtro desiderato scegliendo l'opzione CUSTOM dal menù a tendina, in questo caso si potrà intervenire sui seguenti parametri: Filtraggio in DC, Filtraggio in AC (default valore 5), Misura di Frequenza sul canale di corrente.

ATTENZIONE: campi magnetici di notevole intensità possono far variare i valori misurati dal dispositivo. Evitare l'installazione vicino a magneti permanenti, elettromagneti o masse ferrose che inducano forti alterazioni del campo magnetico. Qualora si manifestassero anomalie consigliamo di orientare diversamente il dispositivo o spostarlo in zona più consona.

9 Modbus Register Map / Mappa dei Registri Modbus

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
Machine ID	Machine ID	Unsigned short	R	7		40001
FW version	Firmware version	Unsigned short	R	0		40002
Address	Modbus address	Unsigned short	R/W	1		40003
Delay	Machine answer delay (in characters)	Unsigned short	R/W	1	0..1000	40004
Baudrate	0= 1200, 1= 2400, 2= 4800, 3= 9600, 4= 19200, 5= 38400, 6= 57600, 7= 115200	Unsigned short	R/W	1	0..7	40005
Parity	0= NO, 1= ODD, 2= EVEN	Unsigned short	R/W	0	0..2	40006
DC Filter	Number of tenths of second (1/10) for all RMS calculation in DC	Unsigned short	R/W	10	1..65535	40007
Flag Measurement	bit 0:[0= TRMS value (without sign); 1 = DC_measurement (with sign)]; bit 1:[0= Energy storing disable; 1= Energy storing enable]; bit 2:[0= Frequency detect on Voltage channel; 1= Frequency detect on Current channel].	Unsigned short	R/W	0x10		40008
TV_Ratio	Voltage transformer ratio	Float (LSW first)	R/W	1.0		40009
TA_Ratio	Current transformer ratio	Float (LSW first)	R/W	1.0		40010
# of ZX for VI measurement	Number of ZX for _AC Meas Number of line cycle Zero Crossings for AC measurement RMS.	Unsigned short	R/W	50	1..65535	40014
STATUS	bit 0: flash settings error; bit1: flash calibration error; bit 2: Voltage Over Range; bit 3: Voltage Under Range; bit [4:5] Reserved; bit 6: Zero crossing detecting; bit [7:9] Reserved; bit 10: Energy storing error; bit 11: Energy initialization error; bit 12: Reserved; bit 13: Current Over Range; bit 14: Current Under Range; bit 15: Reserved.	Unsigned short	R	0		40072
V RMS	Voltage RMS Measurement (V)	Float (LSW first)	R			40073
I RMS	Current RMS Measurement (mA)	Float (LSW first)	R			40074
						40075
						40076

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
P	Active Power Measurement (W)	Float (LSW first)	R			40077
						40078
Q	Reactive Power Measurement (VAR)	Float (LSW first)	R			40079
						40080
S	Apparent Power Measurement (VA)	Float (LSW first)	R			40081
						40082
Cosφ	Cosφ Measurement	Float (LSW first)	R			40083
						40084
Frequency	Frequency Measurement (Hz)	Float (LSW first)	R			40085
						40086
THD	THD Measurement	Float (LSW first)	R			40087
						40088
Energy	Totale Energy Measurement (KWh)	Float (LSW first)	R			40089
						40090
Energy positive	Only positive Energy Measurement (KWh)	Float (LSW first)	R			40091
						40092
Energy negative	Only negative Energy Measurement (KWh)	Float (LSW first)	R			40093
						40094
V peak	Instantaneous Voltage Peak (V)	Float (LSW first)	R/W			40095
						40096
I peak	Instantaneous Current Peak (mA)	Float (LSW first)	R/W			40097
						40098
V MAX	Max RMS Voltage (V)	Float (LSW first)	R/W			40099
						40100
V min	Min RMS Voltage (V)	Float (LSW first)	R/W			40101
						40102
I MAX	Max RMS Current (mA)	Float (LSW first)	R/W			40103
						40104
I min	Min RMS Current (mA)	Float (LSW first)	R/W			40105
						40106
P MAX	Max RMS Power (W)	Float (LSW first)	R/W			40107
						40108
P min	Min RMS Power (W)	Float (LSW first)	R/W			40109
						40110
Q MAX	Max Reactive Power (VAR)	Float (LSW first)	R/W			40111
						40112
Q min	Min Reactive Power (VAR)	Float (LSW first)	R/W			40113
						40114
S MAX	Max Apparent Power (VA)	Float (LSW first)	R/W			40115
						40116
S min	Min Apparent Power (VA)	Float (LSW first)	R/W			40117
						40118

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
Cosφ MAX	Max Cosφ	Float (LSW first)	R/W			40119
Cosφ min	Min Cosφ	Float (LSW first)	R/W			40120
Frequency MAX	Max Frequency (Hz)	Float (LSW first)	R/W			40121
Frequency min	Min Frequency (Hz)	Float (LSW first)	R/W			40122
THD MAX	Max THD	Float (LSW first)	R/W			40123
THD min	Min THD	Float (LSW first)	R/W			40124
STATUS SW	bit 0: flash settings error; bit1: flash calibration error; bit 2: Voltage Over Range; bit 3: Voltage Under Range; bit [4:5] Reserved; bit 6: Zero crossing detecting; bit [7:9] Reserved; bit 10: Energy storing error; bit 11: Energy initialization error; bit 12: Reserved; bit 13: Current Over Range; bit 14: Current Under Range; bit 15: Reserved.	Unsigned short	R			40125
V RMS SW	Voltage RMS measurement (V) swapped	Float (MSW first)	R			40126
I RMS SW	Current RMS measurement (mA) swapped	Float (MSW first)	R			40127
P SW	Power measurement (W) swapped	Float (MSW first)	R			40128
Q SW	Reactive Power measurement Q (VAR) swapped	Float (MSW first)	R			40129
S SW	Apparent Power measurement S (VA) swapped	Float (MSW first)	R			40130
Cosφ SW	Cosφ measurement swapped	Float (MSW first)	R			40131
Frequency SW	Frequency measurement (Hz) swapped	Float (MSW first)	R			40132
THD SW	THD swapped	Float (MSW first)	R			40133

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
Energy SW	Total Energy measurement (KWh) swapped	Float (MSW first)	R			40149
						40150
Energy positive SW	Only positive Energy Measurement (KWh) swapped	Float (MSW first)	R			40151
						40152
Energy negative SW	Only negative Energy Measurement (KWh) swapped	Float (MSW first)	R			40153
						40154
V peak SW	Instantaneous Voltage Peak (V) swapped	Float (MSW first)	R/W			40155
						40156
I peak SW	Instantaneous Current Peak (mA) swapped	Float (MSW first)	R/W			40157
						40158
V MAX SW	Max RMS Voltage (V) swapped	Float (MSW first)	R/W			40159
						40160
V min SW	Min RMS Voltage (V) swapped	Float (MSW first)	R/W			40161
						40162
I MAX SW	Max RMS Current (mA) swapped	Float (MSW first)	R/W			40163
						40164
I min SW	Min RMS Current (mA) swapped	Float (MSW first)	R/W			40165
						40166
P MAX SW	Max RMS Power (W) swapped	Float (MSW first)	R/W			40167
						40168
P min SW	Min RMS Power (W) swapped	Float (MSW first)	R/W			40169
						40170
Q MAX SW	Max Reactive Power (VAR) swapped	Float (MSW first)	R/W			40171
						40172
Q min SW	Min Reactive Power (VAR) swapped	Float (MSW first)	R/W			40173
						40174
S MAX SW	Max Apparent Power (VA) swapped	Float (MSW first)	R/W			40175
						40176
S min SW	Min Apparent Power (VA) swapped	Float (MSW first)	R/W			40177
						40178
Cosφ MAX SW	Max Cosφ swapped	Float (MSW first)	R/W			40179
						40180
Cosφ min SW	Min Cosφ swapped	Float (MSW first)	R/W			40181
						40182
Frequency MAX SW	Max Frequency (Hz) swapped	Float (MSW first)	R/W			40183
						40184
Frequency min SW	Min Frequency (Hz) swapped	Float (MSW first)	R/W			40185
						40186
THD MAX SW	Max THD swapped	Float (MSW first)	R/W			40187
						40188
THD min SW	min THD swapped	Float (MSW first)	R/W			40189
						40190

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
STATUS 100	bit 0: flash settings error; bit1: flash calibration error; bit 2: Voltage Over Range; bit 3: Voltage Under Range; bit [4:5] Reserved; bit 6: Zero crossing detecting; bit[7:9] Reserved; bit 10: Energy storing error; bit11: Energy initialization error; bit 12: Reserved; bit 13: Current Over Range; bit 14: Current Under Range;	Unsigned short	R			40192
V RMS 100	Voltage RMS measurement (V/100) in hundredths	Signed long (LSW first)	R			40193 40194
I RMS 100	Current RMS measurement (mA/100) in hundredths	Signed long (LSW first)	R			40195 40196
P 100	Power measurement (W/100) in hundredths	Signed long (LSW first)	R			40197 40198
Q 100	Reactive Power measurement (VAR/100) in hundredths	Signed long (LSW first)	R			40199 40200
S 100	Apparent Power measurement (VA/100) in hundredths	Signed long (LSW first)	R			40201 40202
Cosφ 100	Cosφ measurement in hundredths	Signed long (LSW first)	R			40203 40204
Frequency 100	Frequency measurement (Hz/100) in hundredths	Signed long (LSW first)	R			40205 40206
THD 100	THD in hundredths	Signed long (LSW first)	R			40207 40208
Energy 100	Total Energy measurement (KWh/100) in hundredths	Signed long (LSW first)	R			40209 40210
Energy positive 100	Only positive Energy Measurement (KWh/100) in hundredths	Signed long (LSW first)	R			40211 40212
Energy negative 100	Only negative Energy Measurement (KWh/100) in hundredths	Signed long (LSW first)	R			40213 40214
V peak 100	Instantaneous Voltage Peak (V/100) in hundredths	Signed long (LSW first)	R/W			40215 40216
I peak 100	Instantaneous Current Peak (mA/100) in hundredths	Signed long (LSW first)	R/W			40217 40218
V MAX 100	Max RMS Voltage (V/100) in hundredths	Signed long (LSW first)	R/W			40219 40220
V min 100	Min RMS Voltage (V/100) in hundredths	Signed long (LSW first)	R/W			40221 40222

Register Name	Comment	Register Type	R/W	Default Value	Range	Modbus Address
I MAX 100	Max RMS Current (mA/100) in hundredths	Signed long (LSW first)	R/W		40223 40224	
I min 100	Min RMS Current (mA/100) in hundredths	Signed long (LSW first)	R/W		40225 40226	
P MAX 100	Max RMS Power (W/100) in hundredths	Signed long (LSW first)	R/W		40227 40228	
P min 100	Min RMS Power (W/100) in hundredths	Signed long (LSW first)	R/W		40229 40230	
Q MAX 100	Max Reactive Power (VAR/100) in hundredths	Signed long (LSW first)	R/W		40231 40232	
Q min 100	Min Reactive Power (VAR/100) in hundredths	Signed long (LSW first)	R/W		40233 40234	
S MAX 100	Max Apparent Power (VA/100) in hundredths	Signed long (LSW first)	R/W		40235 40236	
S min 100	Min Apparent Power (VA/100) in hundredths	Signed long (LSW first)	R/W		40237 40238	
Cosφ MAX 100	Max Cosφ in hundredths	Signed long (LSW first)	R/W		40239 40240	
Cosφ min 100	Min Cosφ in hundredths	Signed long (LSW first)	R/W		40241 40242	
Frequency MAX 100	Max Frequency (Hz/100) in hundredths	Signed long (LSW first)	R/W		40243 40244	
Frequency min 100	Min Frequency (Hz/100) in hundredths	Signed long (LSW first)	R/W		40245 40246	
THD MAX 100	Max THD in hundredths	Signed long (LSW first)	R/W		40247 40248	
THD min 100	min THD in hundredths	Signed long (LSW first)	R/W		40249 40250	
Command	Flash settings save command = 0xC1C0; Reset command = 0xC1A0; Load Energy command = 0xBABA (energy to load must be written in Command_aux); Load Positive Energy command = 0xBABB (positive energy to load must be written in Command_aux); Load Negative Energy command = 0xBABC (negative energy to load must be written in Command_aux);	Unsigned short	R/W	0		40252
Command aux	Auxiliary Register for Energy Command (see command register)	Float (LSW first)	R/W	0		40253 40254

Note / Aggiornamenti



Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Prima di utilizzare il dispositivo, leggere con attenzione le informazioni di sicurezza e settaggio contenute in questo manuale.



RoHS 
Compliant



PIXSYS s.r.l.

www.pixsys.net

sales@pixsys.net - support@pixsys.net
online assistance: <http://forum.pixsys.net>

2300.10.219-RevA
Software Rev. 1.00
080914