Pixsys srl Via Po, 16 I - 30030 Mellaredo di Pianiga VE Ph. +39 041 519 0518 Fax +39 041 519 0027 www.pixsys.net - sales@pixsys.net

Subject to modifications without prior notice

# **Pixsys Submersible Pressure Transmitters**

## Safety standards

Carefully read the instructions and safety measures in this manual before using the device. Disconnect power before performing any interventions on the electrical connections or hardware settings. Only qualified personnel may use/perform maintenance in full respect of the technical data and declared environmental conditions. Do not dispose of electrical appliances together with household waste. In compliance with the European Directive 2002/96/EC, waste electrical equipment must be collected separately for eco-compatible reuse or recycling.

# 1 Technical specifications

Accuracy	± 0.5% F.S.	
Operating and media temperature	– 10°C +70°C	

Storage temperature	ECL:	– 40°C +80°C


# 2 Ordering codes

Item code	Description
2000.40.149	0200 mbar
2000.40.150	0400 mbar

Item code	Description
2000.40.151	0500 mbar
2000.40.152	0600 mbar

Item code	Description
2000.40.155	01 bar

# 3 Type label description (example)

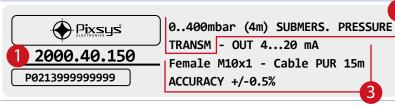




- 1 Item code
- 2 Measuring range
  - Option description

#### 4 Electrical connections

Output	Load resistance	SUPPLY	U <sub>SUPPLY</sub>
4 20 mA	(Usupply-9V) / 20mA		24 (930) VDC
	Features		
	reatures		
Input Protection	IP65		F
Type code	2000.40.XXX	– – F – may 12kg (	120 N)
Pin configuration	Shield  Venting	<ul> <li>F = max. 12kg (120 N)</li> <li>Min. cable bending radius R<sub>min</sub></li> <li>≡ Electrical connection:</li> <li>= - 2X (PUR): 40 mm;</li> <li>= - 3X (Radox): 60 mm;</li> <li>- 4X (PE): 30 mm</li> </ul>	

### 4.1 Pressure connection

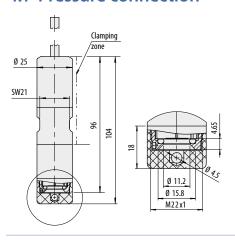

# 4.2 Connection of the measuring equipment

