

17 P_nP Pressure zero point
 Pressure numeric value expressed with the selected measure unit for the retransmission on the analogue output.
 NB: Value displayed but not editable.

18 P_EP Pressure end point
 Pressure numeric value expressed with the selected measure unit for the retransmission on the analogue output.
Default: value greater than f.s.
 Range: 50% - 100% of the nominal pressure range expressed with the selected measure unit.

19 Q_nP Output zero point
 Numeric starting value expressed in tension or current selected on parameter **Q_nR**.
 NB: Value displayed but not editable.
 Example: for **Q_nR** = μ , **Q_nP** = 4.00mA
 Example 2: for **Q_nR** = v , **Q_nP** = 0.00V

20 Q_EP Output end point
 Numeric end value expressed in tension or current selected on parameter **Q_nR**.
 NB: Value displayed but not editable.
 Example: for **Q_nR** = μ , **Q_nP** = 20.00mA
 Example 2: for **Q_nR** = v , **Q_nP** = 10.00V

21 dRR Damping for analogue output
 Low-pass filter for analogue output. Time in seconds for the output stabilisation from 10% to 90% of the variation.
 Example: pressure sensor 0..10 Bar, **dRR** = 1.00s: at instantaneous pressure switch from 0 to 10Bar, the output will take approx. 1.2s. to stabilise from 4.00 to 20.00mA or from 0.00 to 10.00V
 Range: 0.00..3.00. **Default:** 0.00

22 d_r Display rotate
 Display orientation / rotation 0° (normal) or 180°
 YES

23 d_uPd Display update rate
 Display update rate, updates per second.
 2 Every 2 seconds. **Default**
 5 Every 5 seconds

24 d_r Diagnostic mode
 To activate a diagnostic mode.
 on the sensor simulates a pressure ramp in loop, from the min. to the max. value of the pressure range, in a cycle time of approx. 5s. It is used to verify the functioning of the switching points and the analogue output.
 oFF **Default**

25 S_t i Sample time (logger)
 A device integrated data logger
 Range: steps of 0.0s up to 999.9s.
 0.0 logger disabled. **Default**
 The logger stores values into a circular memory of 3500 points, with time selected in **S_t i**, instantaneous pressure value and the status of SP1 and SP2 at sample time. At restart the old logger is deleted and a new one is overwritten. It is possible to analyze the log through a software with NFC interface both with ON or OFF device.

26 c_o d E Access code definition
 0000 = no password. **Default**
 Password input digit by digit
 To modify the password press **SET** and using \blacktriangle or \blacktriangledown select the value of each digit. Press **SET** to modify the next digit. To end the operation, press **SET** and confirm or not with **YES** or **FRLS**.
 NB: If par. **c_o d E** is modified with a number different from 0000, a new password is enabled and will be requested once (until the next restart) to modify parameters and switching points.

28 d_r Display mode
 Display mode defines the displayed value.
 R_c-3 R_cL without the 3 less significant decimals**
 R_c-2 R_cL without the 2 less significant decimals**
 R_c-1 R_cL without the less significant decimal**
 oFF Switches off display after 5 sec.
 ** .. Among those displayed.

no	Default
2	Every 2 seconds. Default
1	Every 1 second



Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.
 Prima di utilizzare il dispositivo leggere con attenzione le informazioni di sicurezza e settaggio contenute in questo manuale.

DST400

Pressure transmitter with display



PIXSYS s.r.l.
 www.pixsys.net
 sales@pixsys.net - support@pixsys.net
 online assistance: <http://forum.pixsys.net>





User manual



2300.10.270-RevC
 Firmware Rev. 5.12
 210920

1 Dimensions - Process Connection

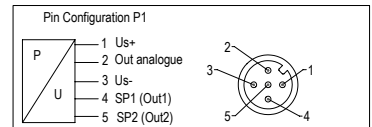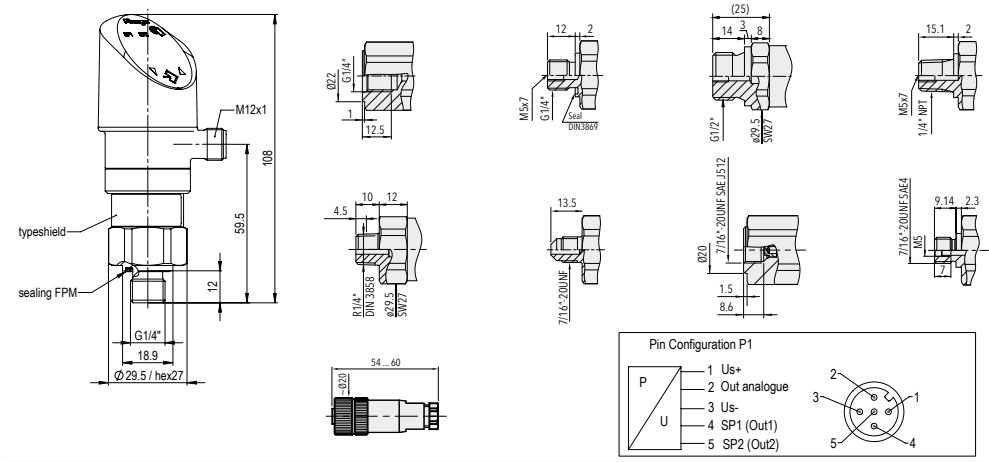


2 Main features

Box	93 x 37 mm
Power supply	15..30 VDC
Power consumption	Max 0,8 W
Operating conditions	Temperature -25..+85 °C, humidity 35..95 RH% (Cable PVC 22: -5°C ... +60°C)
Material	Sensor housing steel galvanised, display housing plastic
Weight	Approx. 189 g
Sealing	IP65 - FPM, NBR, EPDM

2.1 Technical data

Accuracy	± 0,5% F.S. @25°C
Sensor type	Thick film on Ceramic (0..100 Bar) - Thin film on steel (> 100 Bar)
Sensor	Ceramic, Al2O3 (96 %)
Vibration	4g (10...2000 Hz)
Shock	50g / 8 ms
LH @ 25°C (BSL) typ.	± 0.2 % FS typ.
Measuring range	0...1 to 0...400 bar / 0...15 to 0...5000 psi
Pressure connection	G1/4"
Electrical connections	EN175301-803-A (DIN43650-A); M12x1 5 Pole
Housing orientation	Display 335° rotatable - Electrical connection 343° rotatable
Sensor working temperature	-25...+ 85°C
2 digital outputs	Transistor PNP max 500 mA
1 analogue output	Selectable 4..20 mA / 0..10 V
Media temperature	-25°C ... +125°C / 400 bar/5000 psi: -10°C ... +125°C
Long term stability 1 year typ.	± 0.3 % FS typ.

2.2 Software features

Display	4 Digits, 1..3 decimal points
Pressure unit	Selectable Bar, Psi, MPa, kPa, m WC, mm WC
Datalogger	Ring buffer: 3518 data points - Sampling time: 0.1 ... 999.9 s, Off (0)
Quick set-up options	Programming via APP (NFC) for Android smartphones 

2.3 Ordering codes

2000.42.100	DST400 - Range 0..1 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.42.104	DST400 - Range 0..10 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.42.106	DST400 - Range 0..25 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.42.107	DST400 - Range 0..40 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.42.108	DST400 - Range 0..100 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.42.122	DST400 - Range -1..0 Bar / Ceramic / Out 4..20 mA - 0..10 V - G1/4"
2000.43.111	DST400 - Range 0..400 Bar / Film Inox / Out 4..20 mA - 0..10 V - G1/4"

3 Enter switching point configuration

For configuration parameters see paragraph 8

Press	Display	Do
1	At the start, display shows the process.	
2	▲ ○ ▼ Slide up / down through Switching Point parameters (SP1, rP1, SP2, rP2)	
3	SET Access the parameter to be modified	NB: If on par. $\rho d E$ has been entered a password different from 0, the device will require this password before modifying any parameter
4	▲ ○ ▼ Increase or decrease selected value.	Enter the new data and press SET . To modify another parameter back to point 2.

3.1 Enter configuration parameters

For configuration parameters see paragraph 8.1.

Press	Display	Do
5	SET + ▲ ○ ▼ Select par. EF from the switching points modification menu	
6	SET Access the parameter to be modified	Enter the password (if enabled).
7	▲ ○ ▼ Increase or decrease selected value.	Enter the new data and press SET . To modify another parameter back to point 5.

4 Table of Switching point

1 $SP1$ Switching point SP1	Window function*: functioning according to parameter $\rho u 1$. Range: depending on pressure range 0%..100% of full-scale, the decimal point depends on the sensor f.s. Default: 75% f.s. on the selected measure unit. Attention: if par. 10 is selected as "window", par. $SP1$ switches to $FH1$.
2 $rP1$ Reset point rP1	Window function*: functioning according to parameter $\rho u 1$. Range: depending on pressure range 0%..99% of full-scale, the decimal point depends on the sensor f.s. Default: 25% f.s. on the selected measure unit. Attention: if par. 10 is selected as "window", par. $rP1$ switches to $FL1$.

3 $SP2$ Switching point SP2	Window function*: functioning according to parameter $\rho u 2$. Range: depending on pressure range 0%..100% of full-scale, the decimal point depends on the sensor f.s. Default: 75% f.s. on the selected measure unit. Attention: if par. 11 is selected as "window", par. $SP2$ switches to $FH2$.
4 $rP2$ Reset point rP2	Window function*: functioning according to parameter $\rho u 2$. Range: depending on pressure range 0%..99% of full-scale, the decimal point depends on the sensor f.s. Default: 25% f.s. on the selected measure unit. Attention: if par. 11 is selected as "window", par. $rP2$ switches to $FL2$.
5 Table of complete configuration parameters (EF menu)	
5 $rE5$ Reset	Restore default parameters ρd $\rho E5$
6 $dS1$ SP1 Delay Switch	Switching delay ON, output SP1, valid for $SP1$ Range: 0.00..99.99 s. 0 = not active. Default: 0
7 $dR1$ SP1 Delay Reset	Switching delay OFF, output SP1, valid for $rP1$ Range: 0.00..99.99 s. 0 = not active. Default: 0
8 $dS2$ SP2 Delay Switch	Switching delay ON, output SP2, valid for $SP2$ Range: 0.00..99.99 s. 0 = not active. Default: 0
9 $dR2$ SP2 Delay Reset	Switching delay OFF, output SP2, valid for $rP2$ Range: 0.00..99.99 s. 0 = not active. Default: 0
10 $\rho u 1$ Output SP1 function	H = Hysteresis, F = Window* Fnc Out1 ON when process is out of range FH1 / FL1 Fno Out1 ON when process is in range FH1 / FL1 Hnc Out1 OFF = process reaches SP1, ON = process returns to rP1 Hno Out1 ON = process reaches SP1, OFF = process returns to rP1. Default
11 $\rho u 2$ Output SP2 function	H = Hysteresis, F = Window* Fnc Out2 ON when process is out of range FH2 / FL2 Fno Out2 ON when process is in range FH2 / FL2 Hnc Out2 OFF = process reaches SP2, ON = process returns to rP2 Hno Out2 ON = process reaches SP2, OFF = process returns to rP2. Default
12 $u n 1$ Pressure Unit	$u n 15$ mmWg $u n 14$ KPa $PS 1$ Psi $\rho u 1$ Metres of water column ρPA Megapascal $b PA r$ Default % % value according to full-scale of selected sensor
The units are dynamics: where it's not possible to visualize a reading in 4 digits, the relevant unit is hidden. At each measure unit modification, the device re-initializes the switching points with SP1, SP2, rP1 and rP2 default values. Example: with sensor 0..10 Bar and value visualized in PSI, when the measure unit switches from PSI to Bar, SP1 and SP2 will be re-initialized to 7.50 Bar while RP1 and RP2 to 2.50 Bar. Any other SP1, SP2 and RP1, RP2 stored value will be lost.	
13 $L o$ Lowest pressure	Lowest pressure value detected by the sensor with the current measure unit.
14 $H i$ Highest pressure	Highest pressure value detected by the sensor with the current measure unit.
15 $H L r E$ Highest Lowest Reset	Reset of par. $H i$ and $L o$ to the actual pressure value. ρd $\rho E5$ Default
16 $\rho A n A$ Analogue output type	ρFF Output not active (0V / 0mA in output) u Voltage 0..10V Current 4..20mA. Default At each output type modification, the content of par. $\rho n P$ and ρEP changes according to the physical size of the output type.

* Window mode = within this range the output is activated / deactivated according to parameters 10 / 11.